


# Court Caddy

- (1) Place clamp around net post approximately 9" from top of post. Slide the clamp through the grooves on the combination valet tray-post mounting bracket. Clamp to the post by tightening screw on clamp with a screwdriver.
- (2) Hook the basket through the two holes on the bottom of the combination valet tray-post mounting bracket. Your CLEAN-COURT is now ready for use. Holes on sides of bucket are for drainage in case of rain.

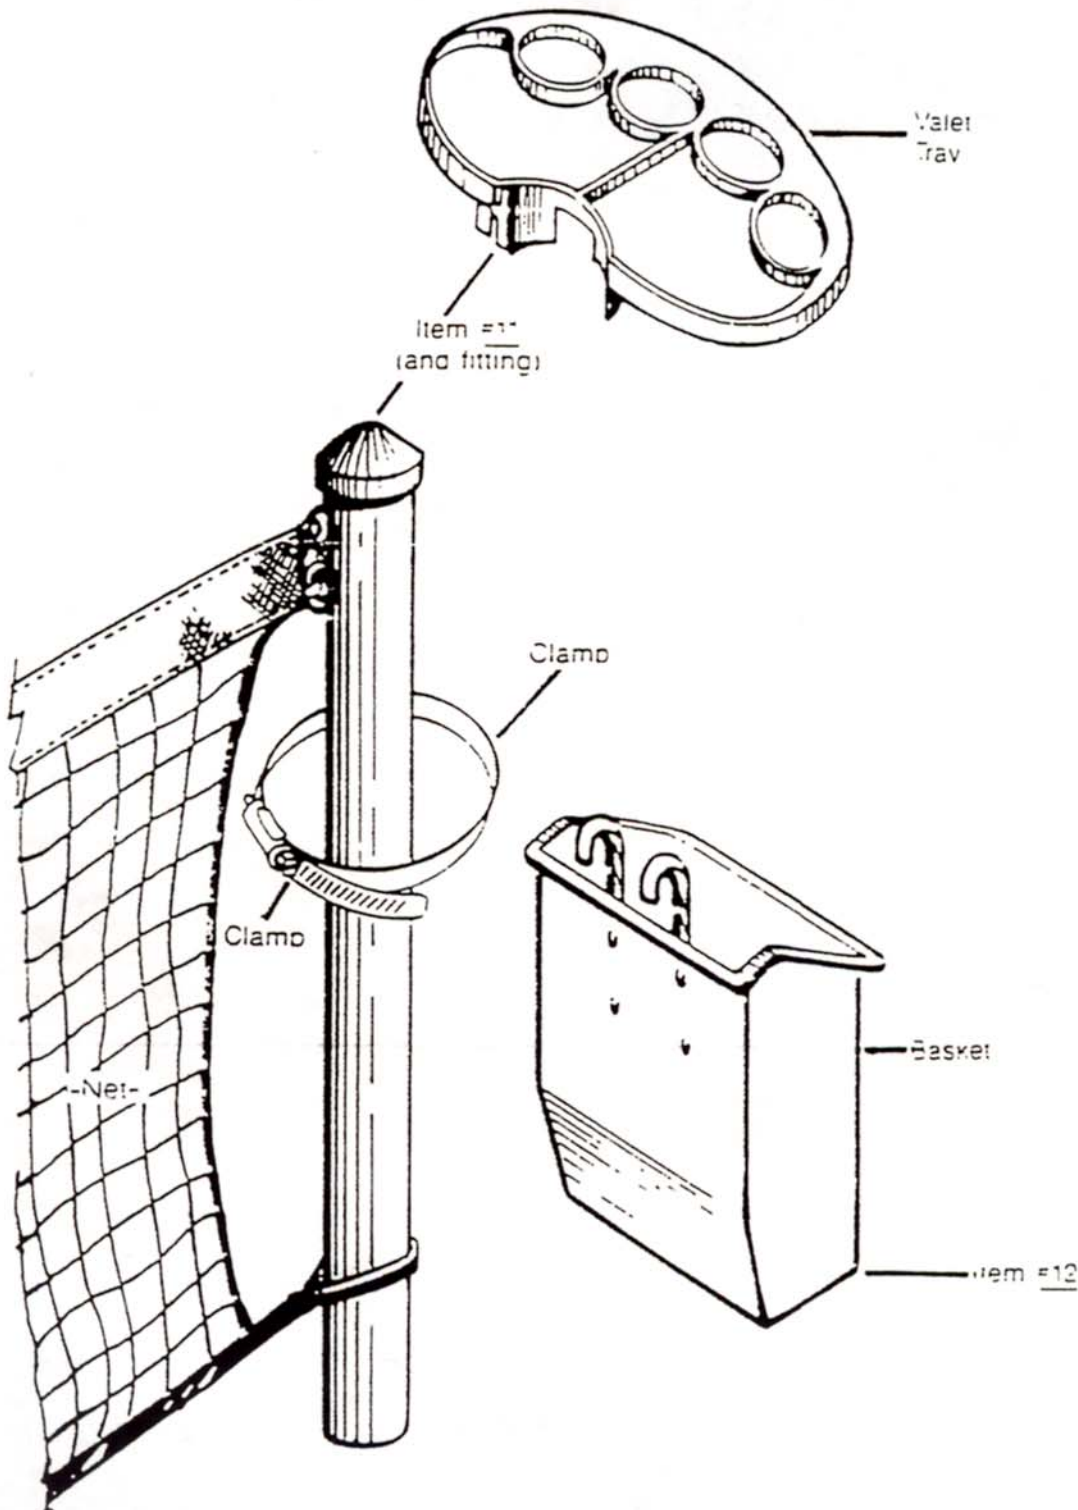

Item #10 - Complete  
Clean-Court Unit

INCLUDED IN BOX:

- Valet tray-post mounting bracket unit
- Clamp
- Basket with hooks