
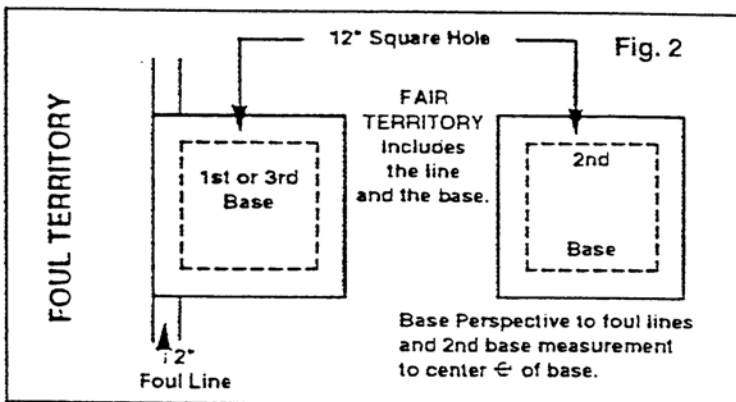


INSTALLATION INSTRUCTIONS FOR HOLLYWOOD BASES® GROUND ANCHORS

Note: Any method of installing ground anchors, other than shown in these instructions, will create damage to the bases and the warranty will become void.

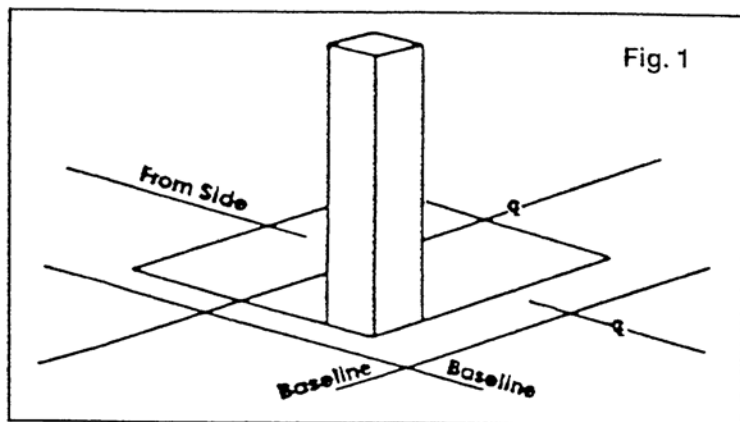

1. Locate base paths.
2. Measure to the proper base distance along foul lines at 1st and 3rd base, square with inside corner of diamond, center line. (c)For 2nd base, center the base at the intersection of 1st and 3rd base paths. See Figs. 1 and 2.

3. Excavate a 12"x12" square hole, nine (9) inches deep.
4. Drive a 1 1/2" square wooden stake, whose sides are parallel to, and 6 3/4" from, each of the two base lines. Check vertical position of stake both ways with level or plumb bob to assure accuracy. Stake must be removed later so do not set too firmly to allow easy withdrawal.

It is imperative that the stake be used to keep the anchor straight and to insure the concrete does not flow up inside the ground anchor tube, which in turn may not allow the base pan stanchion tube to fully seat into the anchor. (Also see Fig. 4.)

5. Slide ground anchor over stake, anchor fins down, and rest it in soil at bottom of stake. Press into soil so top of anchor rim is one inch below ground level of base area. Check position with straight edge. See Fig. 3.
6. Tamp a small amount of soil around base of square tube and anchor fins to prevent concrete from touching wooden stake or blocking hole below tube end, maintaining the 1" position below ground level.

7. Mix and pour concrete to embed anchor 2" from top of the anchor tube. Allow concrete to harden completely before removal of the stake.
8. Install the ground anchor plug, (#BBP-6) into the anchor tube. Fill the cavity with dirt up to ground level. Only a small tip of the plug should be showing after this step. See Fig. 4.

PRIOR TO GAME:



Remove the plug from the ground anchor tube, and clean any loose dirt if necessary from the tube with the Hollywood Dig-Out Tool, (#T-RB-51). This tool may also be used during games or field maintenance to remove debris from the anchor tube.

CAUTION:

Upon installing Jack Corbett® Hollywood Bases®, be sure that the cavity around the anchor tube is filled with dirt, and that the base fits into the anchor cleanly, making sure that all four bottom surfaces of the rubber cover are in intimate contact with the dirt at ground level or slightly below.

AFTER THE GAME:

Remove the base from the ground anchor for storing, and replace the ground anchor plug, (#BBP-6) covering same with dirt to the ground level. See Fig. 4.

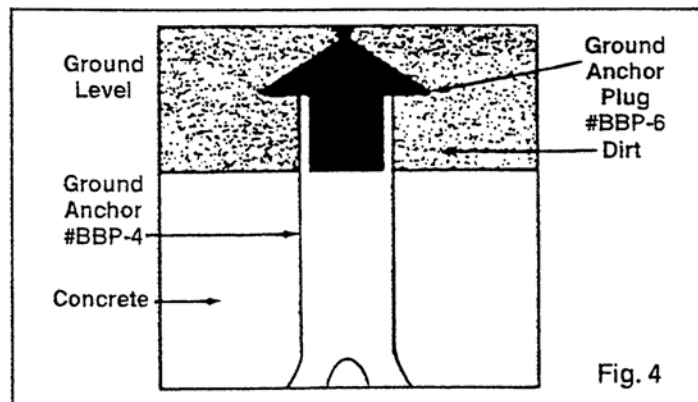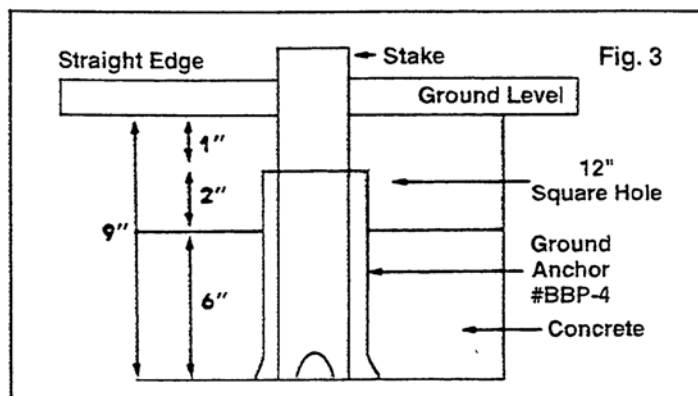

HOLLYWOOD BASES®