


# PRO FIRST BASE/FUNGO SCREEN

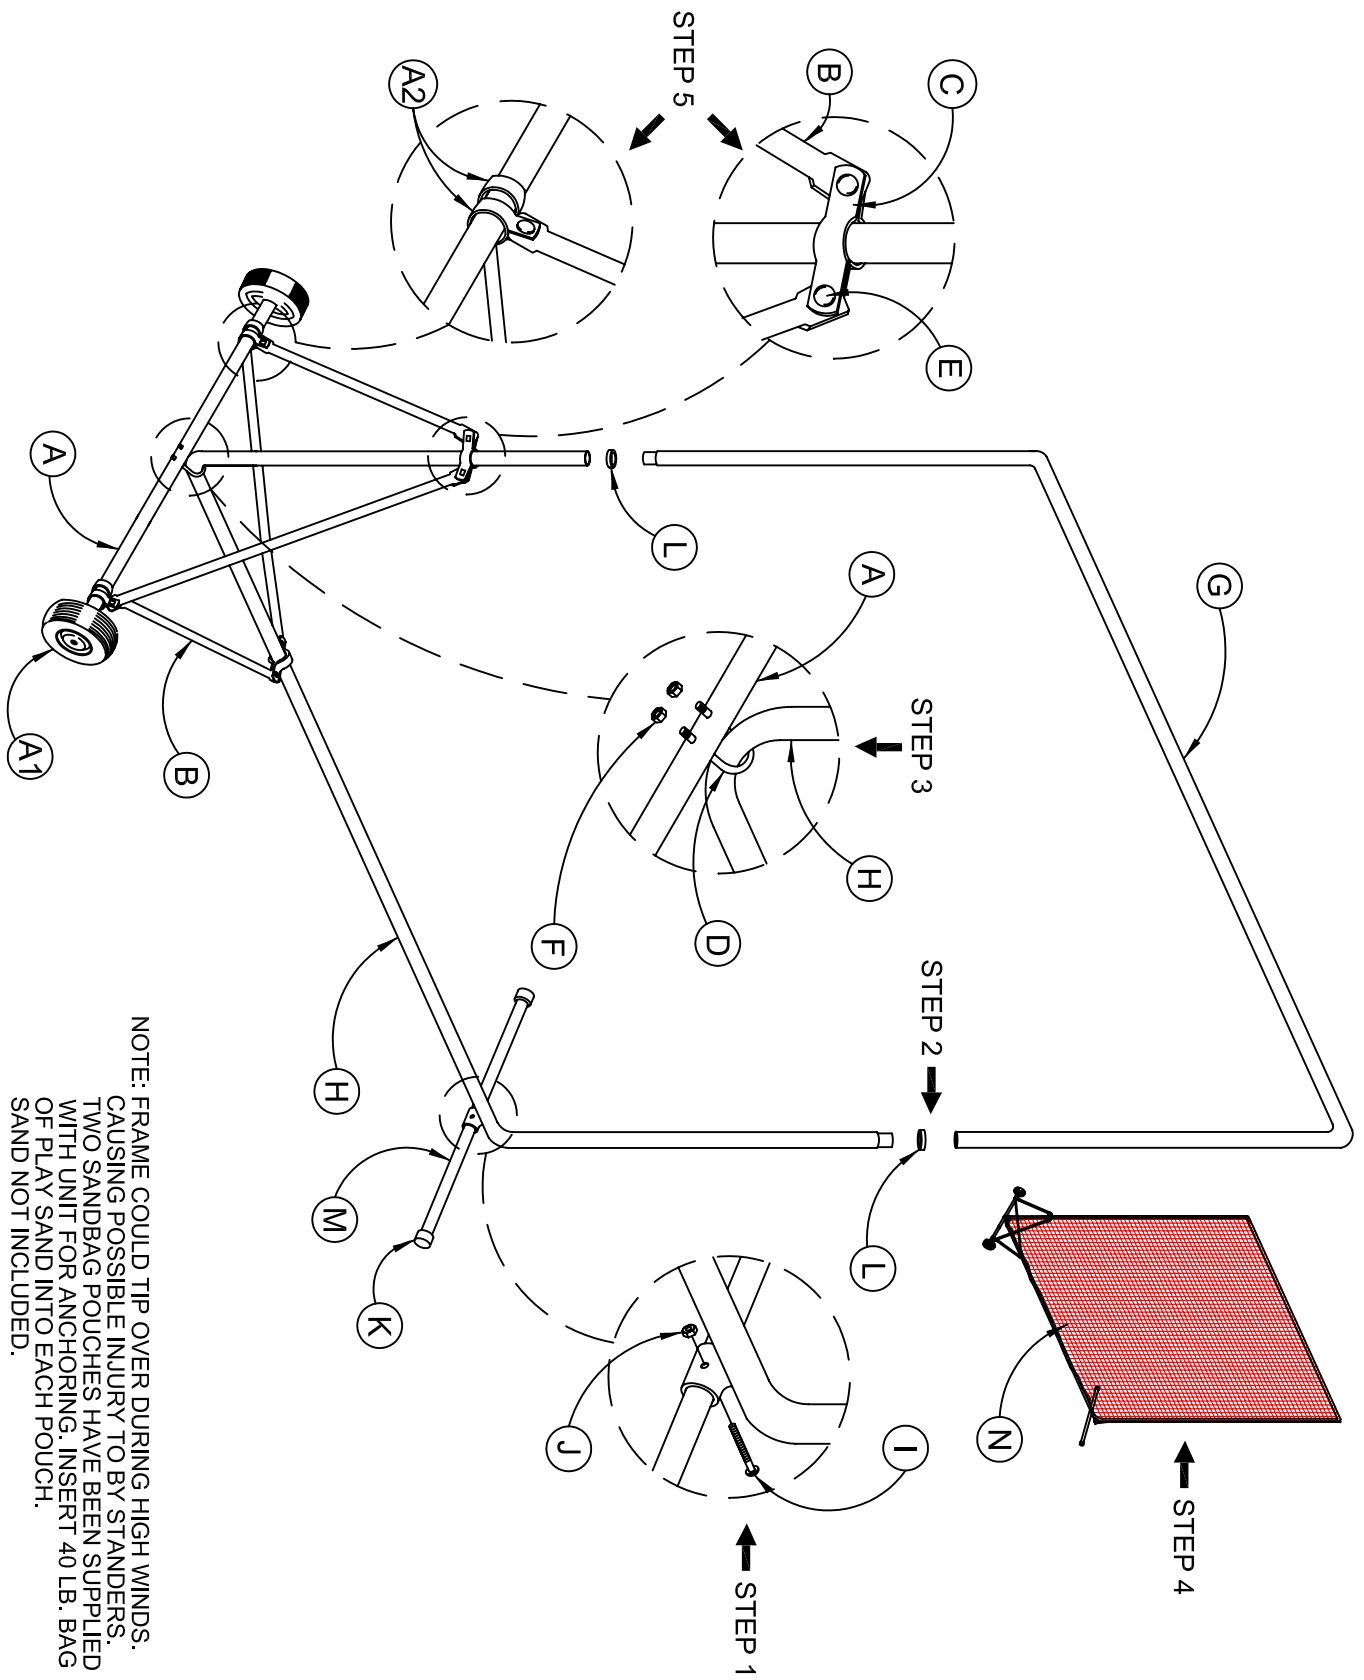

NOTE: FRAME COULD TIP OVER DURING HIGH WINDS, CAUSING POSSIBLE INJURY TO BY STANDERS. TWO SANDBAG POUCHES HAVE BEEN SUPPLIED WITH UNIT FOR ANCHORING. INSERT 40 LB. BAG OF PLAY SAND INTO EACH POUCH. SAND NOT INCLUDED.

# PRO FIRST BASE/FUNGO SCREEN

| ITEM | DESCRIPTION  | QTY   |
|------|--|-------|
| A    | AXEL ASSEMBLY (with wheels and brace bands attached) | 1 EA  |
| A1   | WHEELS   | 2 EA  |
| A2   | BRACE BANDS  | 4 EA  |
| B    | 20" SUPPORT TUBES                                    | 4 EA  |
| C    | 2 WAY BRACE BANDS                                    | 2 EA  |
| D    | U-BOLT   | 1 EA  |
| E    | CARRIAGE BOLT 5/16" X 1"                             | 8 EA  |
| F    | FLANGE NUTS 5/16"                                    | 10 EA |
| G    | UPPER U-SHAPE FRAME TUBE                             | 1 EA  |
| H    | LOWER U-SHAPE FRAME TUBE                             | 1 EA  |
| I    | HEX BOLT 1/4" X 2 3/4"                               | 1 EA  |
| J    | LOCK NUT 1/4"  | 1 EA  |
| K    | PLASTIC CAPS   | 2 EA  |
| L    | ALUMINUM CLAMP RING                                  | 3 EA  |
| M    | 36" BASE TUBE  | 1 EA  |
| N    | NET  | 1 EA  |
| O    | HEX KEY WRENCH                                       | 1 EA  |
| P    | SAND BAG POUCH                                       | 2 EA  |

## ASSEMBLY INSTRUCTIONS

- STEP 1)** Insert Base Tube (*item M*) through the mounting bracket on the Lower U-shape Tube (*item H*) and attach it with Hex Bolt and Lock Nut (*item I, J*).
- STEP 2)** Slide two Clamp Rings (*item L*) on Lower U-shape Tube then insert Upper U-shape Tube (*item G*) into Lower. Align Clamp Rings with the holes and tighten screws.
- STEP 3)** Attach Axel Assembly (*item A*) to Lower U-shape Tube using the U-Bolt and Flange nuts (*item D, F*) as shown in detail 1. Frame should rest approximately 3" off ground.
- STEP 4)** Place Net (*item N*) over frame like a pillow case.
- STEP 5)** Attach the four 20" Support Tubes (*item B*) using the Brace Bands, Carriage Bolts and Flange Nuts (*item A2, C, E, F*) as shown in details 2-6.

# Pro Aluminum Screens WHEEL ASSEMBLY KIT

