


# Douglas® Windscreens

## MEASURING • ORDERING • INSTALLING • CARE

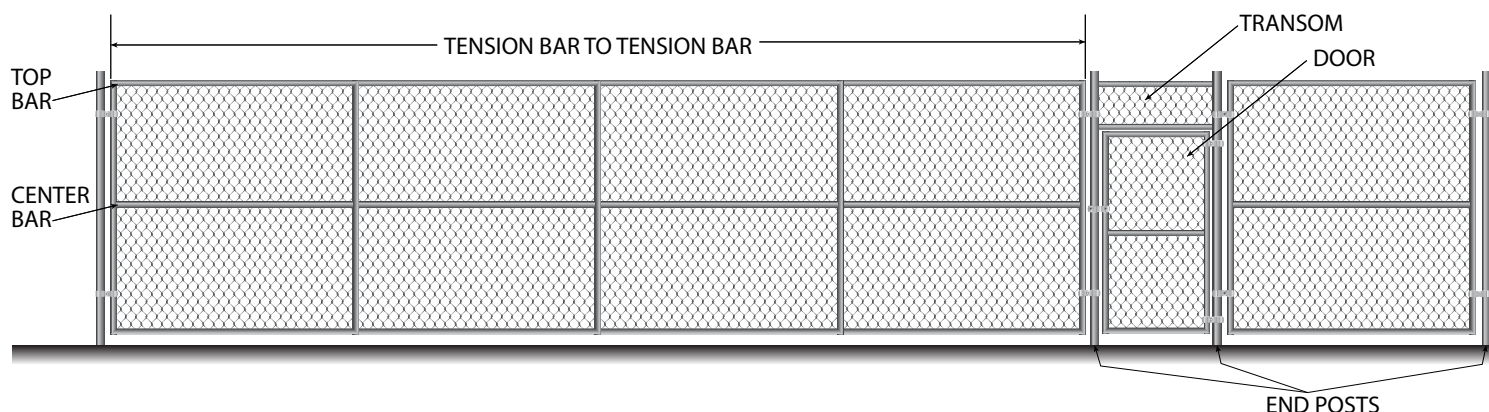

### Suggestions for Measuring and Ordering Windscreens

- Measure all fences tension bar to tension bar. Don't include end posts in the measurement, as windscreens should only cover the fence mesh. Measure doors and transoms the same way. Send a sketch with your measurements.
- Always measure at the site whenever possible rather than from drawings/blueprints.
- Run measuring tape along the ground. Slack occurs if the tape is run along the fence.
- Send us exact measurements of all areas in feet and inches.
- Round down to the nearest inch for each area; no partial inches.
- For ease of handling, order panels 60' in length or shorter.
- Air vents are recommended on all panels over 6' high and also in areas with high winds.
- We recommend labeling panels for better organization upon installation.

### Hanging Windscreens

- Before installing windscreens, make sure the fence is well anchored and in good condition.
- Hang windscreens at least one foot off the ground. (Distance may be less for shorter fences)
- Windscreens should be hung so that air vents, if included, are near the top.
- Make sure that every grommet is attached to the fence with tie wraps and/or rope.
- Ensure to keep windscreens taught to eliminate any bunching and wrinkles

### Fastening Devices

- Tie wraps: These lightweight, UV treated, self-locking plastic fasteners simplify and accelerate any windscreen installation. We recommend using on every grommet.
- Rope: Optional rope may be used to securely attach bottom of screens in lieu of tie wraps.

### Care of Windscreens

- Hose off windscreens with water only and let dry completely
- Fold screens neatly and store indoors.
- Replace any missing or broken tie wraps immediately. Failure to do so may lead to severe wind damage.
- Promptly repair any cuts.